

How to Assemble A Retractable Banner: Economy (78.7"×33.4" & 80"×36", 1-Sided)

01 - Contents: One [1] three-piece pole and a base.



02 - Assemble the three-piece pole.



03 - Insert the pole into the hole at the top of the banner stand base.



04 - Pull the banner out of the base by its top bar (the banner beam), raising it towards the top of the pole.



05 - Attach the banner to the top of the pole using the hook on the banner beam.



06 - YOUR SINGLE-SIDED ECONOMY RETRACTABLE BANNER STAND IS READY TO USE!



Please visit our website [eSigns](https://support.esigns.com) for more products!

Source: https://support.esigns.com/kb/a23/economy-78_733_4-8036-1-sided-instructions.aspx